




MULTIFUNCTION LEVEL JACK SET OF FOUR

MODEL: MF378JSET4

USER MANUAL & SAFETY GUIDE



Thoroughly read this manual before
assembling or using scaffolding unit.

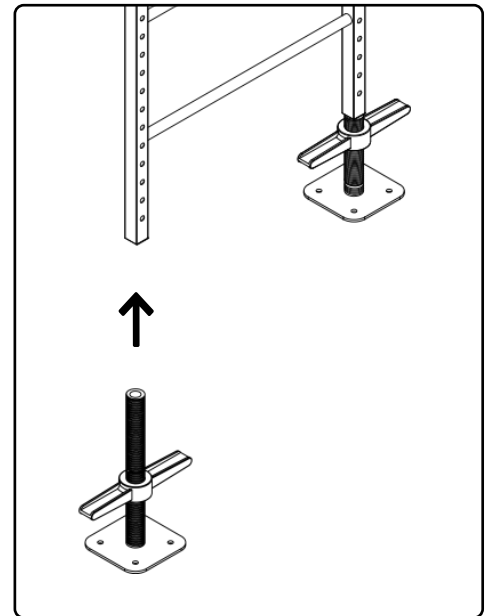

250 lb/each
113 kg/each

1. Adjust level jacks to lowermost setting, with wingnut against base plate.
2. With scaffold frames flat on ground, insert level jack into bottom of end frame.
3. Adjust level jacks one at a time in small increments, without personnel or equipment on scaffold unit.

SAFETY GUIDE



Electrical Warning

Never use scaffolding unit in proximity to
live electrical circuits or powerlines.



Capacity Warning

Scaffolding unit designed for a maximum
load capacity of 1,000 lb, 250 lb per level jack.

Prior to Use

- Only use scaffold unit as intended while complying with local, state, and national guidelines and legislation.
- A competent person should manually inspect scaffolding prior to each use, ensuring it is in good condition and that casters, siderails, and platforms are properly locked and components are secured with proper fasteners.
- Only use on level, even surfaces. Avoid using scaffold on surfaces that are soft, muddy, debris filled, holey or otherwise obstructed.
- Refrain from using scaffolding if you are unwell, taking medication, consuming alcohol, mind-altering drugs or experiencing any other condition that may impair your ability to work.
- Two side rails must be installed on each set of two frames, at the same height setting such that platform is mounted level. Scaffold collapse is possible with uneven placement and could result in injury or death.
- Casters must always be secured with span pins and caster brakes must be locked before climbing or standing on scaffolding.
- Do not use scaffolding or outriggers if any parts are damaged or missing.

During Use

- Keep body as close to ladder as possible when climbing. This helps prevent tipping.
- Keep body centered inside structure of scaffold to avoid tipping.
- Maintain a constant firm grip while climbing scaffold.
- Keep scaffold free of clutter and unnecessary equipment to avoid tripping while in use.
- If any part of scaffolding unit becomes damaged during use, it should be removed immediately from the work area and replaced.
- Acids are corrosive and exposure diminishes the integrity of scaffold unit. Do not expose to corrosive materials.
- Remove or fasten all tools, material, or equipment before moving scaffolding. Never move scaffold while a person is on unit. Be careful when moving unit to avoid tipping.

Exceeding 72"

- Wherever a fall of 72" or higher may occur, guardrails must be in use.
- Whenever a fall of 72" or higher may occur, a set of outriggers must be in use.
- When exceeding 72" with single 6' Multifunction Unit, Side-Rail Cuff Clamps and extra span pins must be in use.
- 6' Multifunction unit is not to be stacked more than three units high.

DO NOTS

- Never use anything other than manufacturer approved equipment to extend the dimensions of scaffolding unit.
- Never use powered devices to propel this scaffold unit.
- Never stack on loose materials, boxes, or any other non-approved foundation.
- Never move scaffold with living things on or under unit.
- Never use scaffold in windy conditions or during inclement weather.
- Never use scaffold on uneven surfaces.
- Never stack more than three units.

Customer Service/Contact

866-900-0983
info@scaffoldmart.com
1705 S. Evans St, Greenville, NC 27834